



P<sub>g</sub> = GRAVITY LOAD-LBS.  
P<sub>u</sub> = UPLIFT LOAD-LBS.  
V = BASE SHEAR-LBS.

20 PSF LIVE LOAD/90 MPH WIND LOAD

REVISIONS			FULFAB, INC. CANTON, OHIO		
NO	DATE	BY	ANCHOR BOLT SETTING PLAN & DETAILS 5 UNIT MODEL BC42 HANGAR		
			DRAWN	DATE	SCALE: NONE
			CHK'D	DATE	DWG. NO. FT-664